D Mode CT Phone

DM1000/DMS1000

All-in-one wireless and landline communications device.

www.waxess.com

Quick Reference Guide

Set up the Base

INSTALL THE SIM CARD

Open the cover

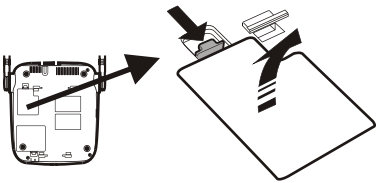

Insert the SIM card, beveled corner facing right, contact area facing down, then close the cover

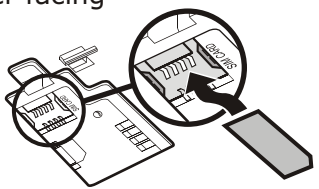

CHOOSE LOCATION

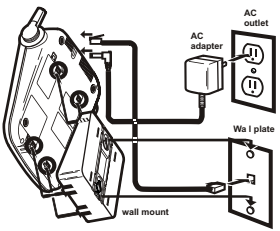

Wall mount

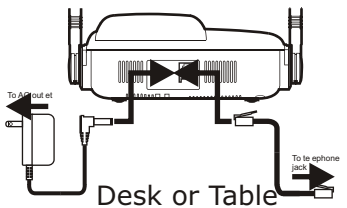

Desk or Table

ATTACH THE CORDED HANDSET

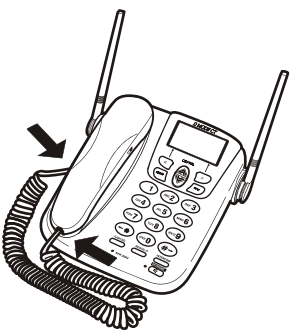

POWER ON

When powered on for the first time, the base goes through an initialization sequence.

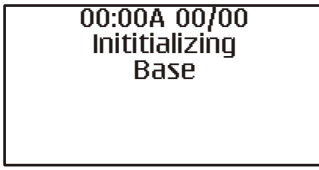

Do not use the phone until the initialization sequence is complete.

When the sequence is complete, the Standby Screen appears. This screen appears on both the base and the handset, and is always visible when the phone is idle. At the bottom of the screen, the text indicates which service lines are active. CEL is wireless service, and TEL is landline service.

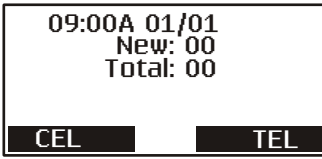

Ready the Cordless Handset

INSTALL THE BATTERY

Open the cover

Connect the battery

Close the cover

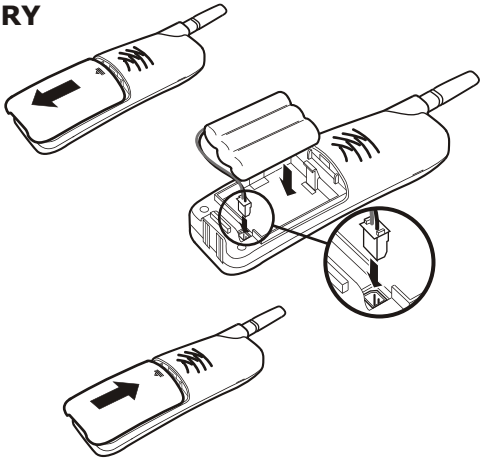

Ready the Cordless Handset

CHARGE THE BATTERY

Find the cordless handset AC Adaptor (the smaller adaptor, Model number AD35-0904). Connect the AC adaptor to the DC 9V IN jack on the charger and to a standard 120V AC wall outlet.

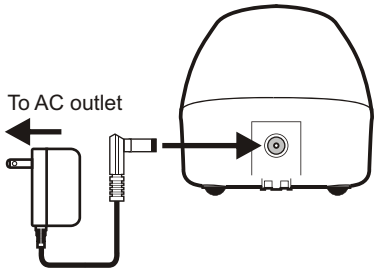

Set the charger on a desk or table, then set the handset in the charger with the keypad facing forward.
Allow the battery to charge for 12 - 15 hours.

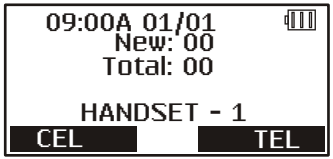

A power indicator in the upper right corner of the LCD shows how much battery life remains.

Full charge

Low charge

D Mode CT Keys

SELECTION KEYS

Press these keys to access the phone menus, phone book, and to select and activate features. The key function changes depending on which feature you are using.

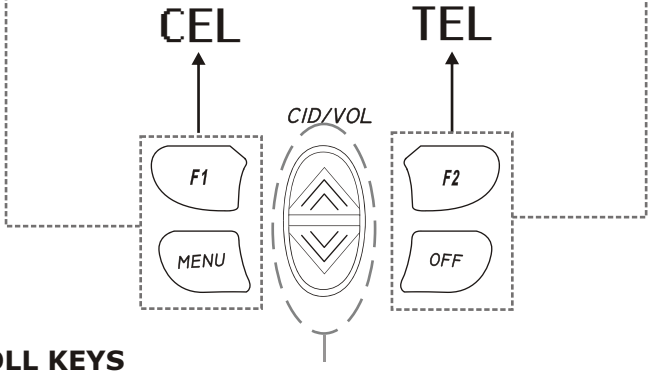

SCROLL KEYS

Use the scroll keys to scroll up or down through menus, the Caller ID log, messages, and other information.

NUMBER AND FUNCTION KEYS

Use the number keys to enter phone numbers (when dialing), letters (when entering names in the phone book or writing messages). Use the function keys for features such as Flash, Redial, and Speakerphone. For details, see the user guide.

Make a call

WIRELESS CALL

Cordless Handset	Speakerphone on Base	Corded Handset on Base
Press CEL **Enter number** **Press** CEL **again** **OR** **Enter number** **Press** CEL	**Enter number** **Press** CEL	**Lift handset** **Enter number** **Press** CEL
To end the call, press *OFF*	**To end the call, press** *SP-PHONE*	**To end the call, replace the handset**

LANDLINE CALL

Cordless Handset	Speakerphone on Base	Corded Handset on Base
Press TEL **Enter number** **Press** TEL **again** **OR** **Enter number** **Press** TEL	**Enter number** **Press** TEL	**Lift handset** **Enter number** **Press** TEL
To end the call, press *OFF*	**To end the call, press** *SP-PHONE*	**To end the call, replace the handset**

BASIC CALLS

CEL or TEL call with Speakerphone

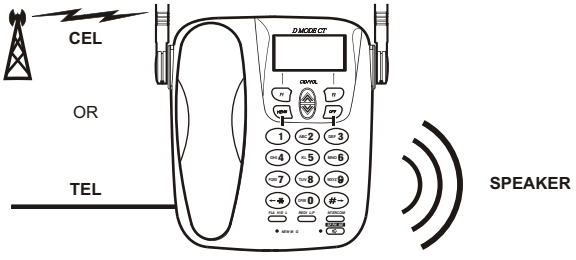

CEL or TEL call with Corded Handset

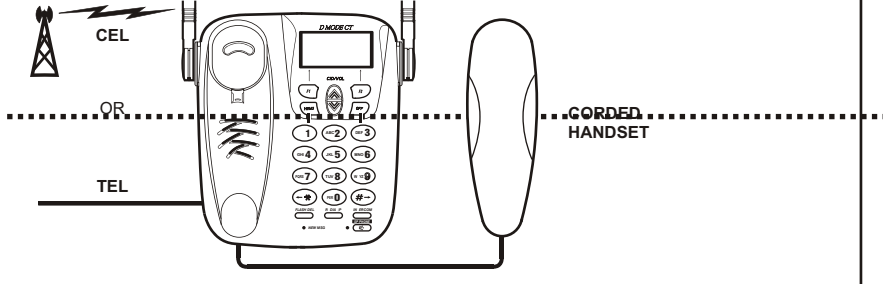

CEL or TEL call with Cordless Handset

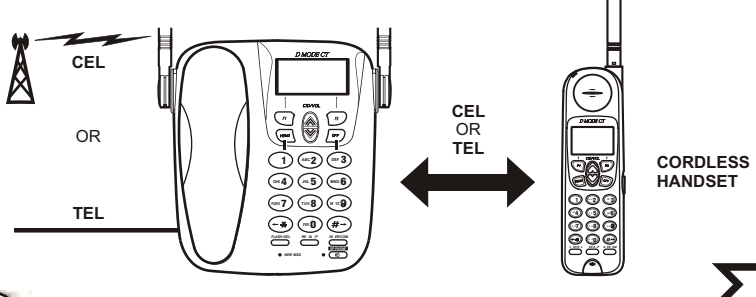

Continued on back

Follow this map to the features of the D Mode CT. See the User Guide for more details.

TWO LINE CALLS

Cordless Handset on CEL
Base (Speaker or Handset) on TEL

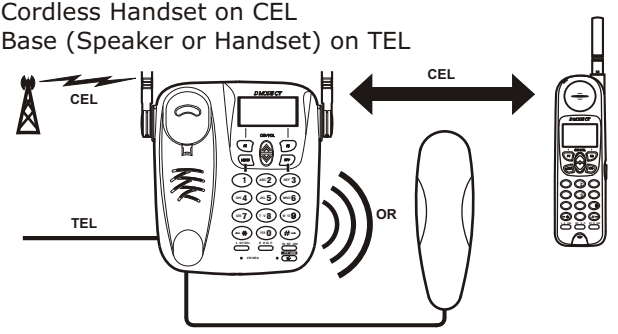

Cordless Handset on TEL
Base (Speaker or Handset) on CEL

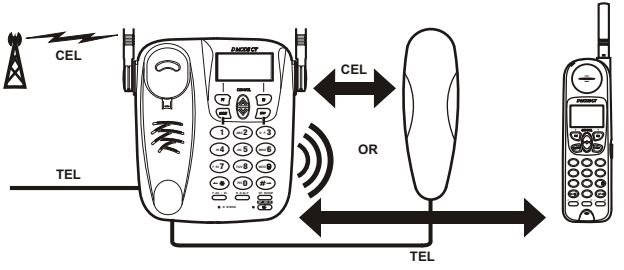

Cordless Handset 1 on TEL
Cordless Handset 2 on CEL

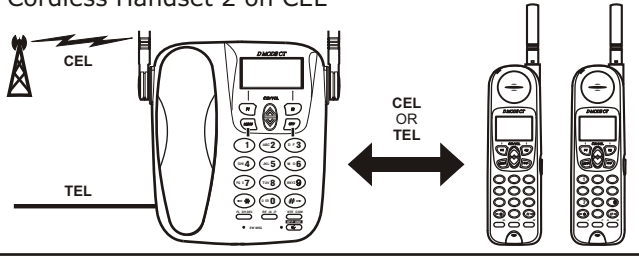

TWO LINE CALLS cont.

Cordless Handset on CEL and TEL

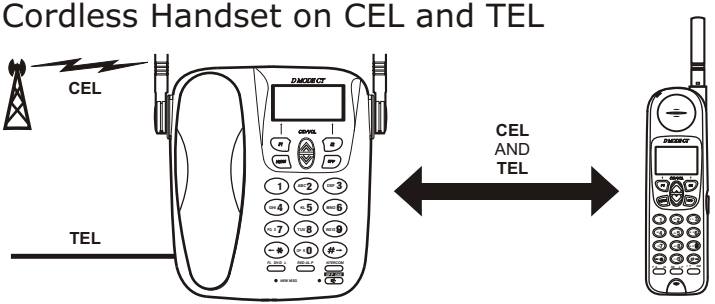

BARGE-IN

Allows multiple handsets to join a conversation on a TEL line call.

See Chapter 4 in the User Guide to activate Barge-in.

2 or more Cordless Handsets

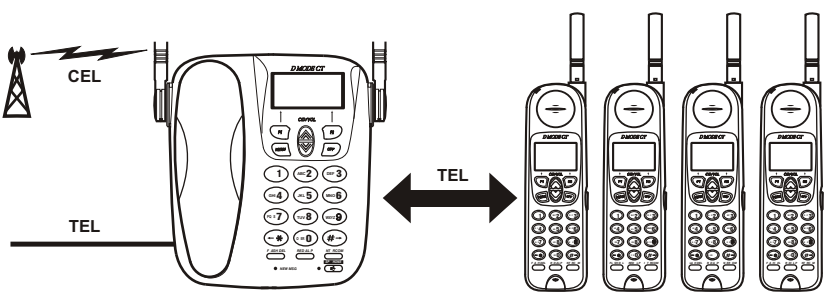

BARGE-IN cont.

TEL - 2 or more Cordless Handsets
CEL - Base speakerphone or Corded Handset

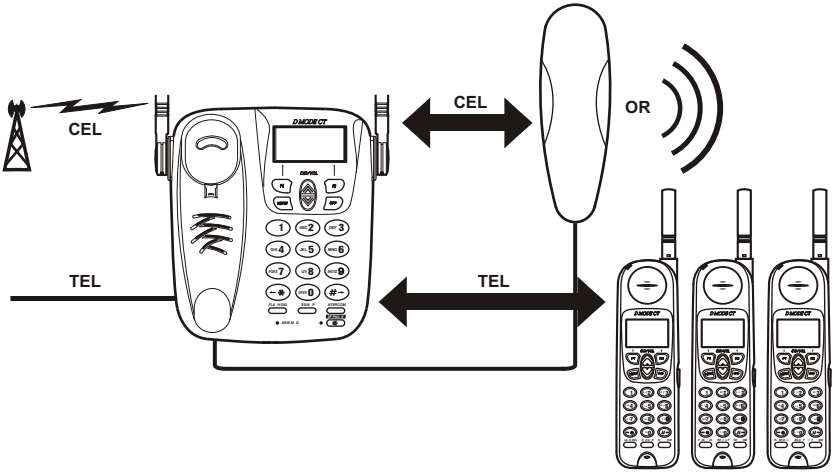

TEL - 2 or more Cordless Handsets
CEL - 1 Cordless Handset

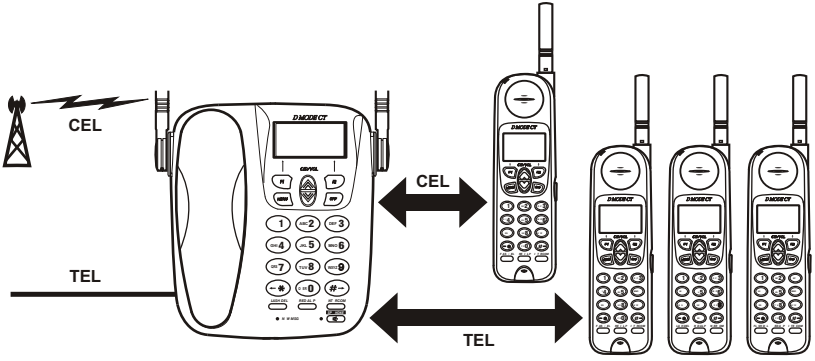

CELLULAR ONLY

Allows multiple handsets to join a conversation on a CEL call.

1. Disconnect the telephone cord from the base.
2. Press **Menu**, scroll to **Setup**, and press **Select**.
3. Scroll to **Cellular Only**, and press **Select**.
4. Scroll to **On**, and press **Select**.

Base speakerphone or corded handset

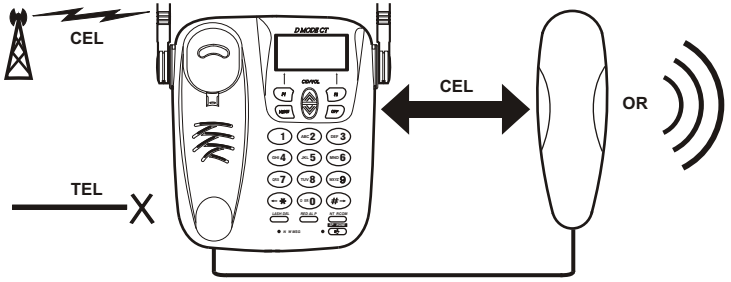

2 or more cordless handsets

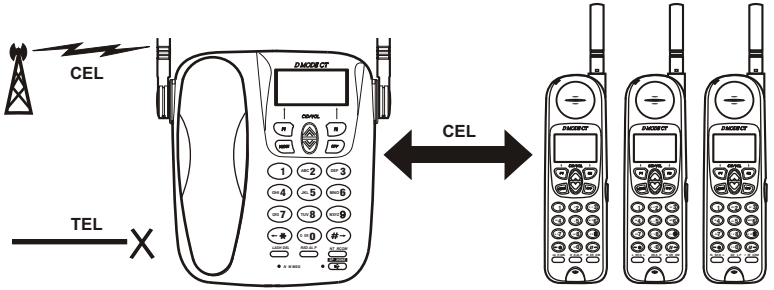

Base to cordless handset

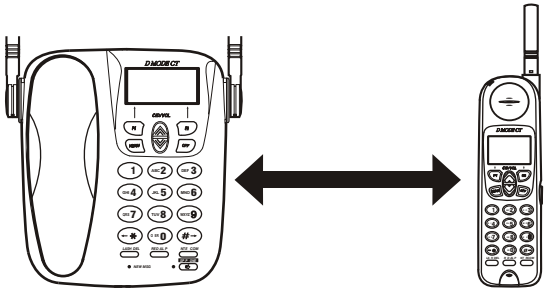

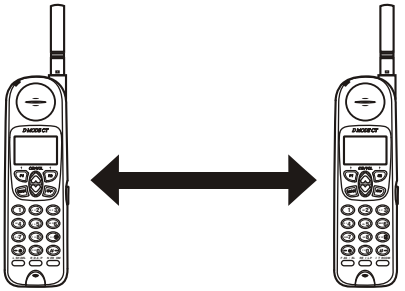

Base to all cordless handsets

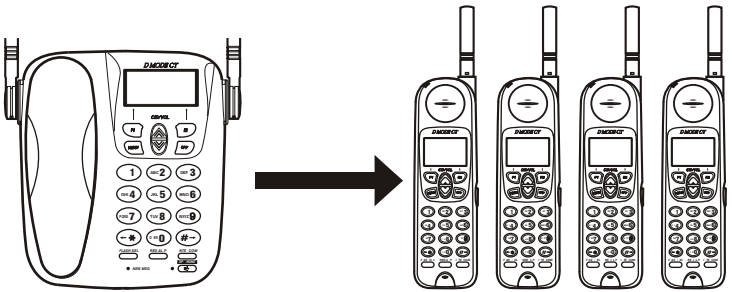

INTERCOM

Base to cordless handset

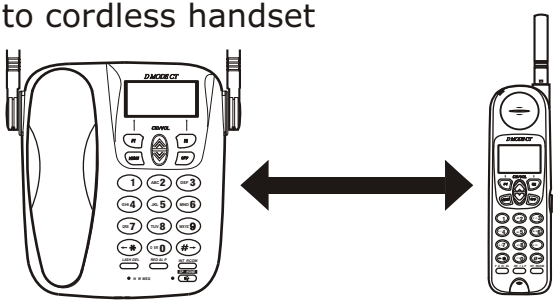

Cordless handset to cordless handset

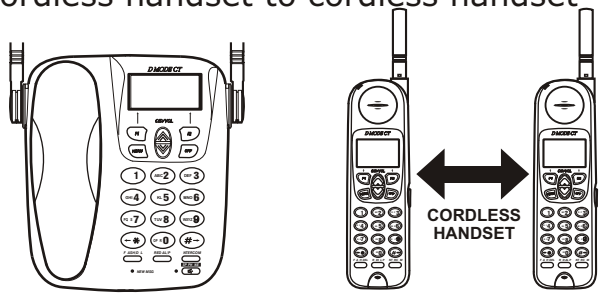

CEL or TEL Base to cordless handset 1

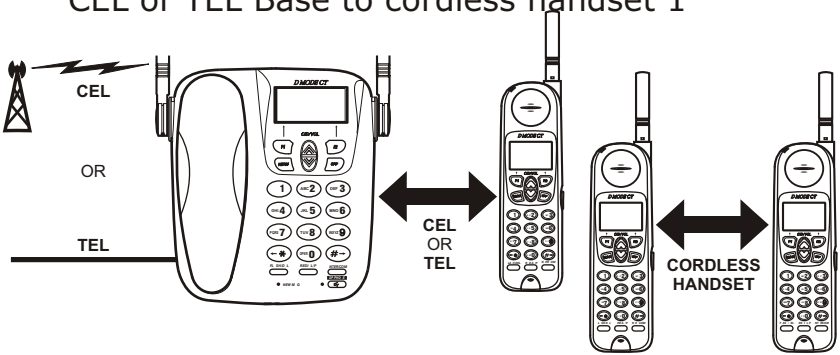

Cordless handset to cordless handset

CALL TRANSFER

Unattended transfer: call transferred immediately

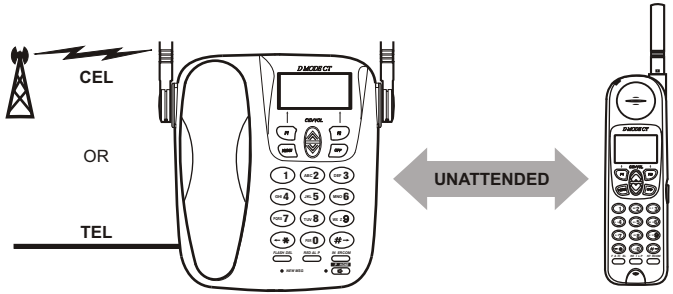

Attended transfer: call automatically on hold
Transfer party and receiving party can speak before transfer

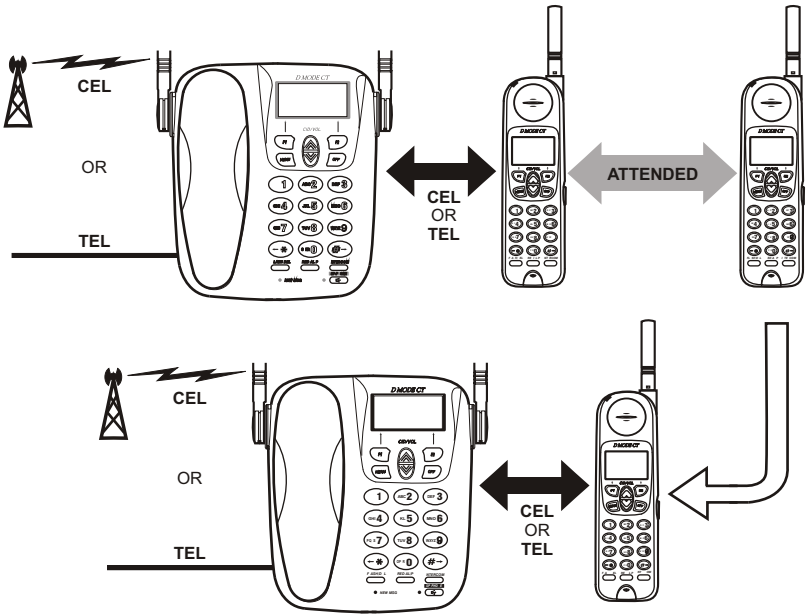

CALL TRANSFER (cont.)

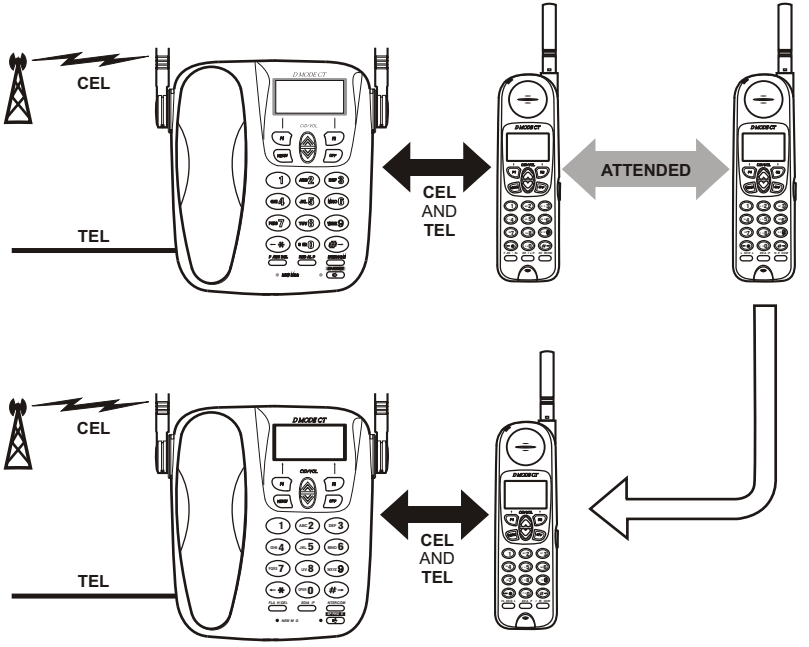

For all the details, see the user guide

Chapter 2

Dialing mode
Time and date
Set the ringer tone
Key beep
Area codes
Language
LCD Contrast
Name
Handset registration

Chapter 3

Make a Wireless call
Make a Landline call
Calling options
Answer a wireless call
Answer a landline call
In-Call Operations
Phone book
Messages

Chapter 4

Caller ID
Page and Intercom
Two-line calling
Barge-in
Cellular only
Power back-up

Waxess, Inc.
34 Executive Park, Suite 250
Irvine California, 92614
HF1000US008